



®  
701 GULLO AVENUE  
ELK GROVE, IL 60007  
Phone 847-640-7002  
Fax 847-640-7008  
[sales@triteqlock.com](mailto:sales@triteqlock.com)

## HVV lock/door adjustment procedure

### Check door tension

Close and lock the door. Check door tightness by pulling on top and bottom of door. Door should move very little.

### Adjusting:

Test door tightness and adjust as necessary.

The preferred method of adjusting the door is to use the TriTeq lock reader.

Step 1. Start by adjusting the door hex bolt clockwise very tight.

Step 2. Close and lock the vendor door.

Step 3. Using the lock reader read the lock. Press the button on the lock reader 7 times. The readout should read c o o L. If the 2<sup>nd</sup> digit (from the left) is not o then open the door, tighten the adjustment screw clockwise an additional 1 to 2 turns and re-close and lock the door. Read the lock again and check to make sure the readout indicates c o o L. Repeat as necessary until c o o L is displayed.

Step 4. Open the door, turn the adjustment screw counter-clockwise 1 / 4 to 1 / 2 turn.

Step 5. Lock the door and check with lock reader. Display should now read c c o L. If it still reads c o o L then open the door and loosen the adjustment screw an additional 1 / 4 to 1 / 2 turn. Repeat as necessary until the display shows c c o L. The lock is now adjusted to maximum usable tightness for the vendor door.

